

ROLLER BLINDS HANGING INSTRUCTION

RECOMMENDED TOOLS



Measurement
tape



Pencil



Screwdriver




Drill

PREPARATION

Firstly, check you've got all the fittings that came with your roller blind.

Your brackets are packed separately in the box. Please ensure you've located them before disposing of the packaging. The brackets are a universal type that can be used to top fix the blind into recess or face fix into a frame or wall. Please read the following instructions carefully before you start fitting your blind.

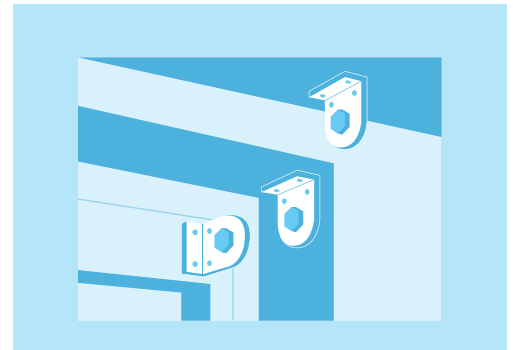

HANGING


Step 1. Mount the brackets on the window frame or wall.

Measure the points where your brackets will be screwed on either side. Ensure the brackets are positioned a suitable distance away from any window handle or obstructions to allow the blind to operate smoothly. Hold the bracket in place and pre-drill the screw holes. Then use the impact driver to screw the brackets in.



Step 2. Install the roller blind on the wall frame or wall.

Mount the rolled up roller blind into the brackets. Once the blind is in place, secure the sash cord's control bracket to the window frame. The sash cord raises and lowers the blind.

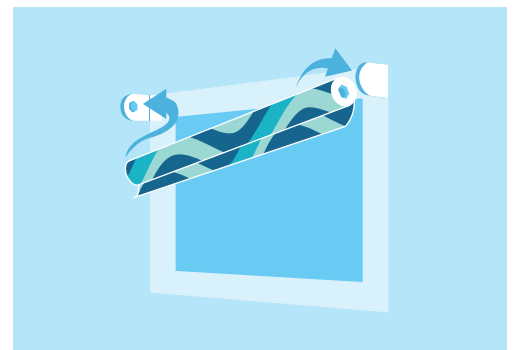

Step 3. Enjoy your new roller blind!

Once you've installed your roller blind, make sure it works smoothly, sit back and enjoy your new blinds!

