

WINDOW MEASURING INSTRUCTION

RECOMMENDED TOOLS



Measurement
tape



Pencil




Paper sheet


PREPARATION

Look at your window handles and tiles. Decide where you want your blinds to hang:

- On the inside of your window (this is called recess)
- On the outside of the window (this is called exact fitting)

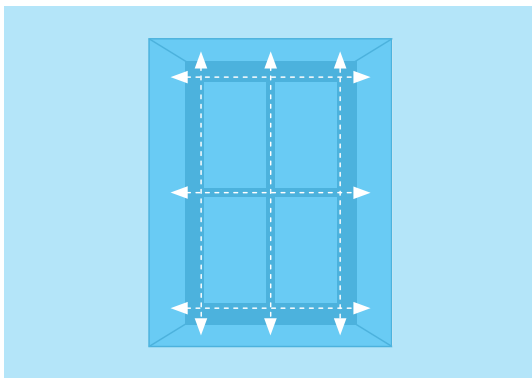

Recess

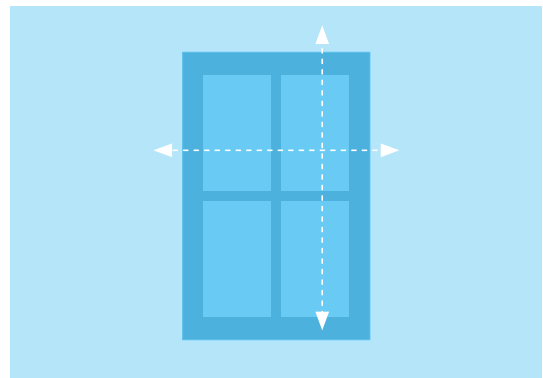

Exact fitting

MEASURING

For the inside of the window blind

Step 1.

Measure the width of the inside of the window from wall to wall in 3 places shown. Write down the **shortest** measurement.

Step 2.

Measure the length of your window in 3 places as shown. The length measurement from the top of the window to the window sill or floor. Write down the **shortest** measurement.

For outside of the window blind

Step 1.

Decide what distance you would like your blind to extend beyond the left and right of your window, then measure the distance between these two points. Write down this measurement (width).

Step 2.

Decide precisely how high above the window you would like your blind to be fixed and measure down to exactly where you would like it to finish. This may be to the floor or to the window sill. This measurement is called the drop. Write down this measurement.

Always double check your measurements before ordering!



Decoshaker