

HOW TO MEASURE ROLLER BLINDS

RECOMMENDED TOOLS



Measurement
tape



Pencil




Paper sheet


PREPARATION

Look at your window handles and tiles. Decide where you want your blinds to hang:

- On the inside of your window (this is called recess)
- On the outside of the window (this is called exact fitting)

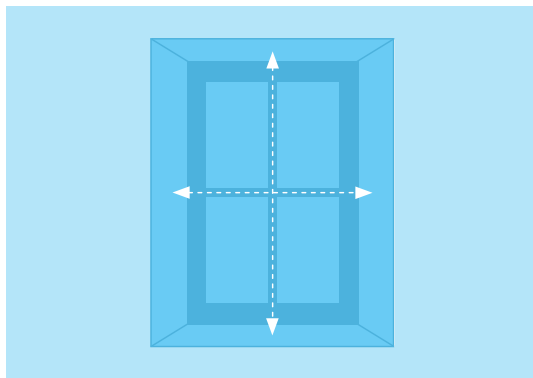

Recess (inside on the window)

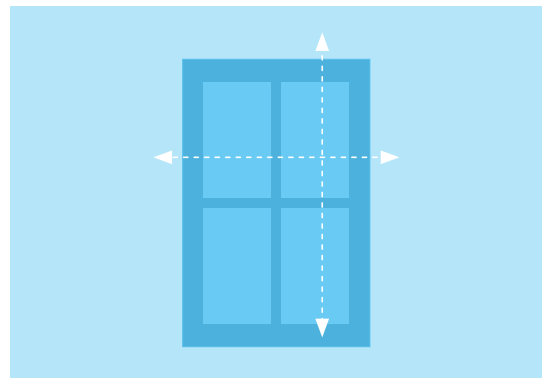

Exact fitting

MEASURING

For the inside of the window blind

Step 1.

Measure from top to bottom (recess). This measurement enters the section "Height".

Step 2.


Measure from side to side (recess). From the number obtained deduct 4 cm (because of mechanism). This measurement enters the section "Width".

Example:

Enter to:

Height
120 cm

Width
116 cm

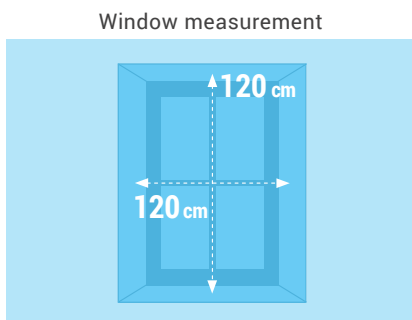

For outside of the window blind

Step 1.

Decide what distance you would like your blind to extend beyond the left and right of your window, then measure the distance between these two points. Write down this measurement (width).

Step 2.

Decide precisely how high above the window you would like your blind to be fixed and measure down to exactly where you would like it to finish. This may be to the floor or to the window sill. This measurement is called the drop. Write down this measurement.