

# HOW TO MEASURE VERTICAL BLINDS

## RECOMMENDED TOOLS



Measurement  
tape



Pencil




Paper sheet


## PREPARATION

Look at your window handles and tiles. Decide where you want your blinds to hang:

- On the inside of your window (this is called recess)
- On the outside of the window (this is called exact fitting)

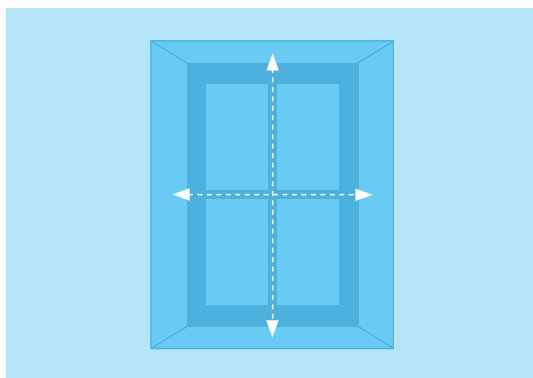

Recess (inside on the window)

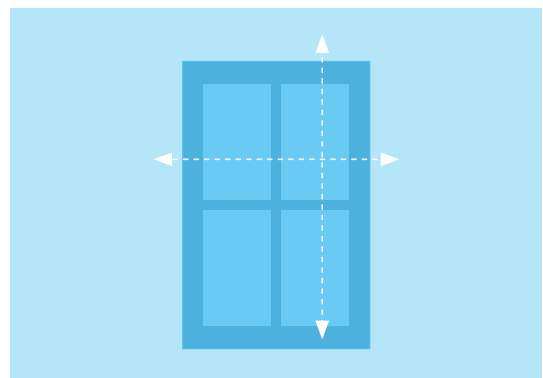

Exact fitting

## MEASURING

### For the inside of the window blind

#### Step 1.

Measure from top to bottom (recess). From the number obtained deduct 6 cm (because of mechanism). Enter the measurement to "Height".

#### Step 2.


Measure from side to side (recess). This measurement enters the section "Width".

#### Example:

Enter to:

Height  
114 cm

Width  
120 cm

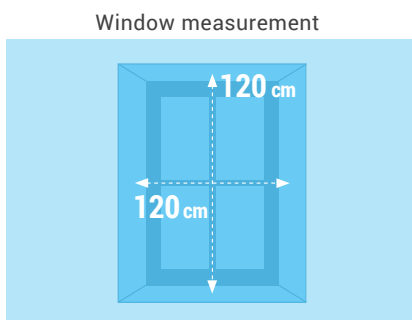

### For outside of the window blind

#### Step 1.

Decide what distance you would like your blind to extend beyond the left and right of your window, then measure the distance between these two points. Write down this measurement (width).

#### Step 2.

Decide precisely how high above the window you would like your blind to be fixed and measure down to exactly where you would like it to finish. This may be to the floor or to the window sill. This measurement is called the drop. Write down this measurement.